 


Drop Bar DYNAWELL



Technical Information

SPECIFICATIONS:

DESIGNED TO BE RELEASED AT SURFACE TO INITIATE THE MECHANICAL ACTUATED TYPE FIRING HEADS IN WELLS WITH UP TO 40° DEG. DEVIATION. THE BRASS INDENT CAN BE USED TO DETERMINE IF DROP BAR HAS REACHED THE FIRING HEAD SHOULD INDICATION OF INITIATION AT SURFACE BE UNDETERMINED

RECOMMENDATIONS:

CHANGE BRASS INDENT AFTER EACH RUN. DO NOT USE IN WELLS WITH DEVIATION ABOVE 40°.

AVAILABLE TYPES:

REFER TO BELOW SELECTION CHART

Fishing Neck O.D.	20.3mm / 0.800"
--------------------------	-----------------

Revision: RP04015AA

Selection Chart

Part No.	Type	O.D.	Overall Length (mm / ft)	Weight (kg)	Dimensions (mm)
2316780	Brass Indent, For Mech. Fir. head DW	28.57mm /1,125"	1830mm - 6,0ft	8,9	1830 x 28.57

Brass Indent Replacement available on request

Other types are available